


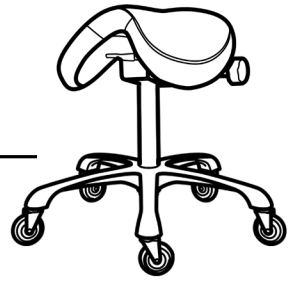






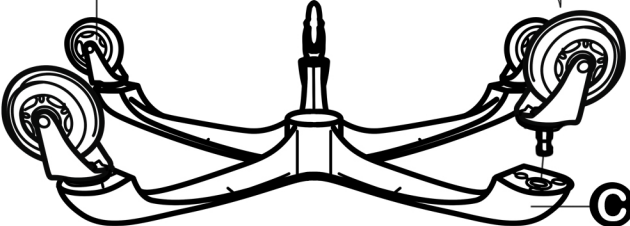
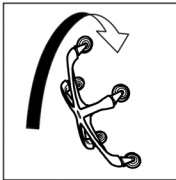

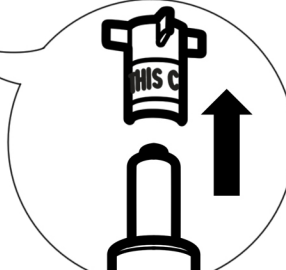
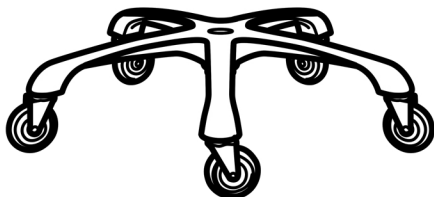



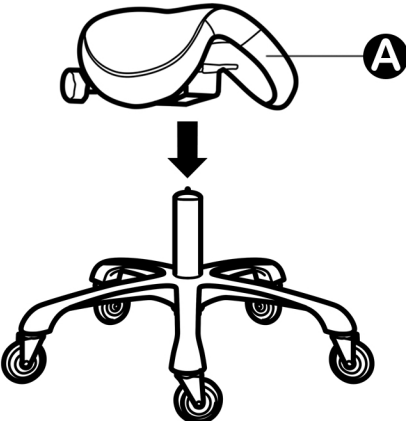
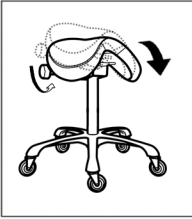
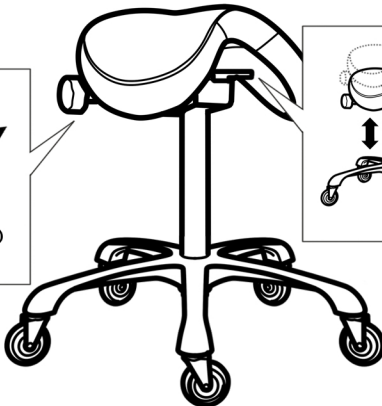
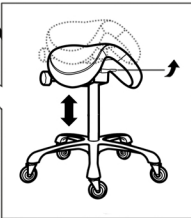
# STOOL 507R

## Assembly Instruction



|   |   |  |   |
|---|---|--|---|
| <br>10 MIN         |                    | <b>A</b><br><br>1X | <b>B</b><br><br>1X |
| <b>C</b><br><br>1X | <b>D</b><br><br>5X |  |   |

|  |   |
|--|---|
| <b>STEP 1</b><br><br><br><br>5x<br><br><b>D</b> | <b>STEP 2</b><br><br><br><b>B</b><br><br><br> |
|--|---|

|  |  |
|--|--|
| <b>STEP 3</b><br><br><b>A</b> | <b>STEP 4</b><br><br><br> |
|--|--|

**!** **Disassemble Tips:** Before you start, you might want to put something down to protect your floor. Turn the stool upside down. Give the seat bottom and hydraulic cylinder protruding end a firm tap with a hammer or a rubber mallet.